Stitch Overview

Utility Stitches

The stitches described in the below chart are utility stitches, used mainly for utility sewing.

The most frequently used stitches are printed next to the stitch selection buttons on the front of the machine (Stitch Menu 1). Those stitches are selected by touching the corresponding button (if Menu 1 is active). Stitches on menu 2–4 are printed on the Stitch Charts that can be pulled out at the bottom of the machine.

When sewing, use a thread tension between 3–5. Always test sew on a piece of scrap fabric, and adjust the tension if necessary.

			Application
0	Straight Stitch Center Position	A	The basic stitch used for sewing. The most common use for a straight stitch is to sew two pieces of fabric together.
0	Straight Stitch Left Position	A	For all types of sewing.
○ ≡ = = = = = = = = = = = = = = = = = = =	Straight Stretch Stitch	A	Stronger than a regular straight stitch, on stretch knit fabrics, because it locks three times — forward, backward and forward again. Use it to reinforce seams of sportswear and for curved seams which take a lot of strain.
0mm	Stretch Stitch	A	For seams in tricot and stretch fabrics.
	Zigzag Stitch	A	A very versatile stitch for decorative sewing, applique and attaching ribbons and trims.
	Multi-Step Zigzag Stitch	A	Finish seam allowances to prevent the fabric from unravelling. When seam finishing, the smaller step of the stitches will help keep fabric more flat than a regular zigzag. It can also be used for mending tears and sewing elastic.
	Reinforced Zigzag Stitch	В	For joining fabric edge to edge or overlapping in leather. For decorative sewing.
\sim	Overlock Stitch	J	Sew seam and overcast in one step along the edge or trim later. For medium and medium/heavy stretch fabrics.
\ 	Blind Hem Stitch	D	Sew hems that are practically invisible from the right side of the fabric. It is used for skirts, dresses, trousers, curtains etc, made with non-stretch fabrics.
wwww	Stretch Blind Hem Stitch	D	Sew hems that are practically invisible from the right side of the fabric. It is used for garments and other projects made with stretch knit fabrics.
777	Slant Overedge Stitch	J	Seam and overcast in one step along the edge or trim later. For medium and heavy stretch fabrics.
	Closed Overlock Stitch	В	Sew decorative hems and overlapped seams, belts and bands. For medium/heavy stretch fabrics.
*	Honeycomb Stitch	В	For elastic insertion, decorative stitching, smocking, couching and hemming.


I Introduction

9

 	Seam/Overcast Stitch	J	Seam and overcast in one step along the edge or trim later. For light stretch and non-stretch fabrics.
	Buttonhole	С	Sew buttonholes on home decór, garments, crafts and more.
	Rounded Bartack Buttonhole	С	For light weight fabrics.
	Rounded Bartack Buttonhole, Reinforced	С	For light weight fabrics.
	Keyhole Buttonhole	С	Square end for tailored jackets, coats, etc.
	Keyhole Buttonhole, Reinforced	С	Square end for tailored jackets, coats, etc.
	Keyhole Buttonhole, Tapered	С	Tapered end for tailored garments.
	Keyhole Buttonhole, Rounded	С	For blouses and children's garments.
10000000000000000000000000000000000000	Heavy Duty Buttonhole	С	For medium and heavy fabrics.
Www.ww	Stretch Buttonhole	С	For stretch fabrics.
***************************************	Bartack Stitch	С	Reinforce pockets, shirt openings, belt loops as well as at lower end of a zipper.
1777 	Darning Stitch	С	Darn and mend small holes in work clothes, jeans, tablecloths and linen towels.
	Eyelet	В	For belts, laces, etc.

Decorative Stitches

Your machine also offers decorative and other useful stitches (see below). When sewing the decorative stitches, make sure to use a stabilizer underneath the fabric for better appearance. Use a thread tension between 3–5. Always test sew on a piece of scrap fabric, and adjust the tension if necessary.

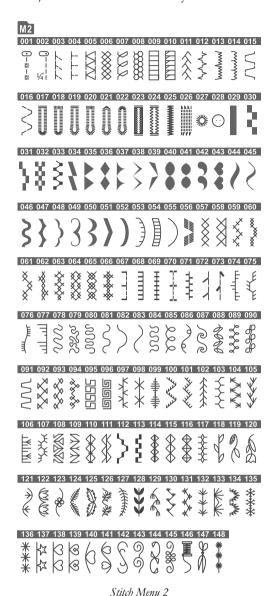

001 002 003 004 005 006 007 008 009 010 011 012 013 014 015 1 2 3 4 5 6 7 8 9 0 A B C D E 016 017 018 019 020 021 022 023 024 025 026 027 028 029 030 F G H I J K L M N O P Q R S T 031 032 033 034 035 036 037 038 039 040 041 042 043 044 045 UVWXYZÄÅÆÑÖØÇĞİ 046 047 048 049 050 051 052 053 054 055 056 057 058 059 060 ŞÜÂÉÈÎÏÔβ&?! 061 062 063 064 065 066 067 068 069 070 071) @ : ; . – (М4 001 002 003 004 005 006 007 008 009 010 011 012 013 014 015 1 2 3 4 5 6 7 8 9 0 A B C D E 016 017 018 019 020 021 022 023 024 025 026 027 028 029 030 FGHIJKLMNOPQRST 031 032 033 034 035 036 037 038 039 040 041 042 043 044 045 UVWXYZÄÅÆÑÖØÇĞİ 046 047 048 049 050 051 052 053 054 055 056 057 058 059 060 SÜÄÉÈÎÏÔß&?

Stitch Menu 3 and 4 — Block and Outline Font

061 062 063 064 065 066 067 068 069 070 071

I Introduction